



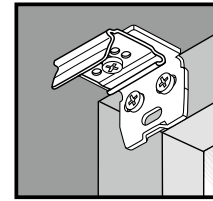

**Falzmontage,  
Top fixing,  
Bewestiging in de sponning,  
Dans la feuillure,  
Montaggio nella piegatura,  
Образование складок**









**Winkelmontage,  
Face fixing,  
Bewestiging met hoeksteun,  
Avec equerre de fixation,  
Montaggio mediante angolare,  
Построение угла**



**Montage • Fitting  
Montage • Montaggio  
Монтаж**

Standard  Duette 

**1**

2,2 mm    $\varnothing$   
 2,0 mm    $\varnothing$   
 1,5 mm    $\varnothing$

112 mm

**2**

**3-5** Click!

**3**

**4**

**5**

**6**

**7**

**8**

**9**



**10**

**Demontage • Disassembly • Demontage • Démontage • Smontaggio • Демонтаж**







**1**

**2**

**Montage • Fitting  
Montage • Montaggio  
Монтаж**

Standard  Duette 

**1**

2,2 mm    $\varnothing$   
 2,0 mm    $\varnothing$   
 1,5 mm    $\varnothing$

100 mm

**2**

**3**

**4**

**5-7** Click!

**5**

**6**

**7**

**8**

**9**

**10**

**11**

**12**

**Demontage • Disassembly • Demontage • Démontage • Smontaggio • Демонтаж**

**1**

**2**